

1/10

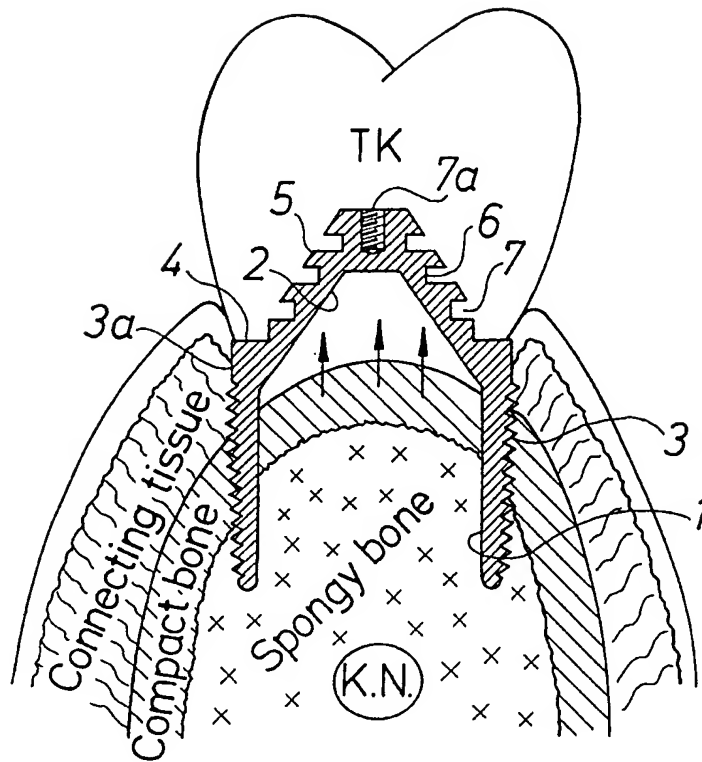


FIG. 1



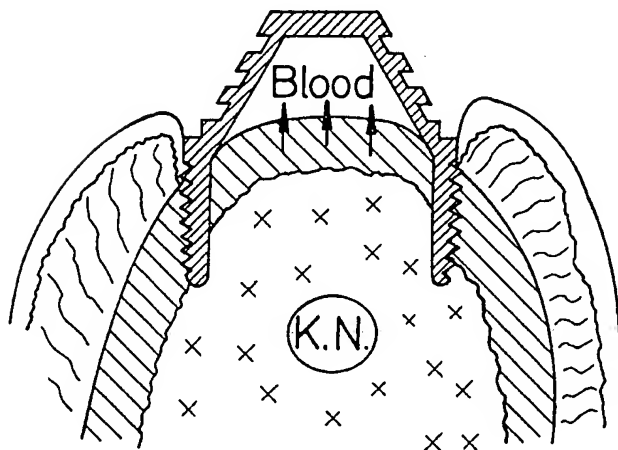


FIG. 2

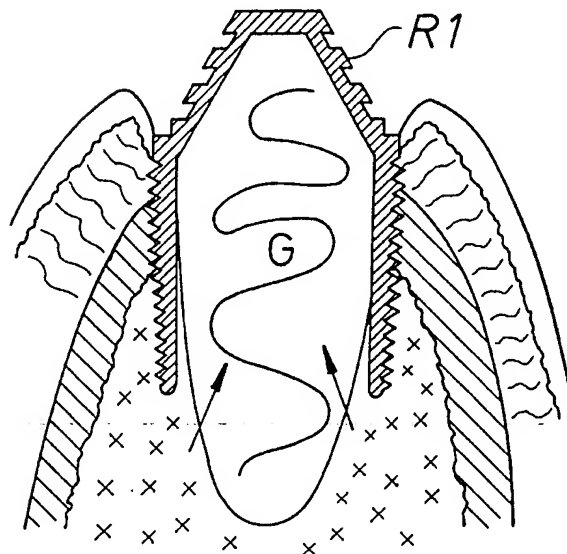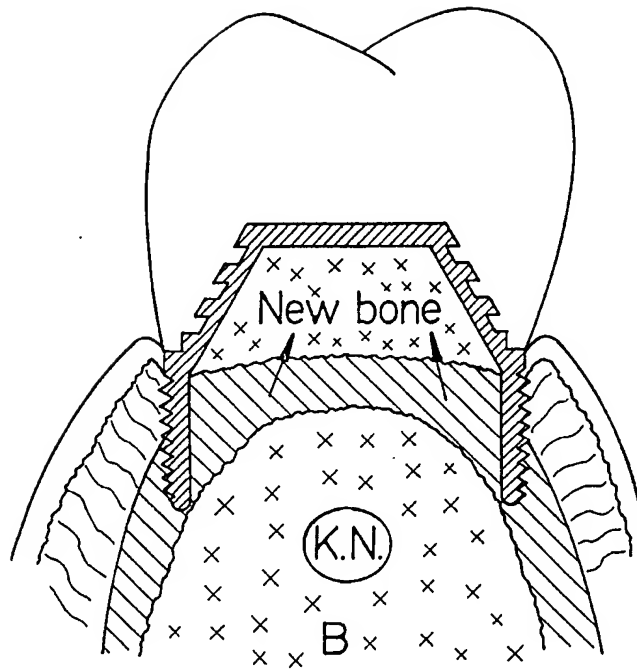

3/10

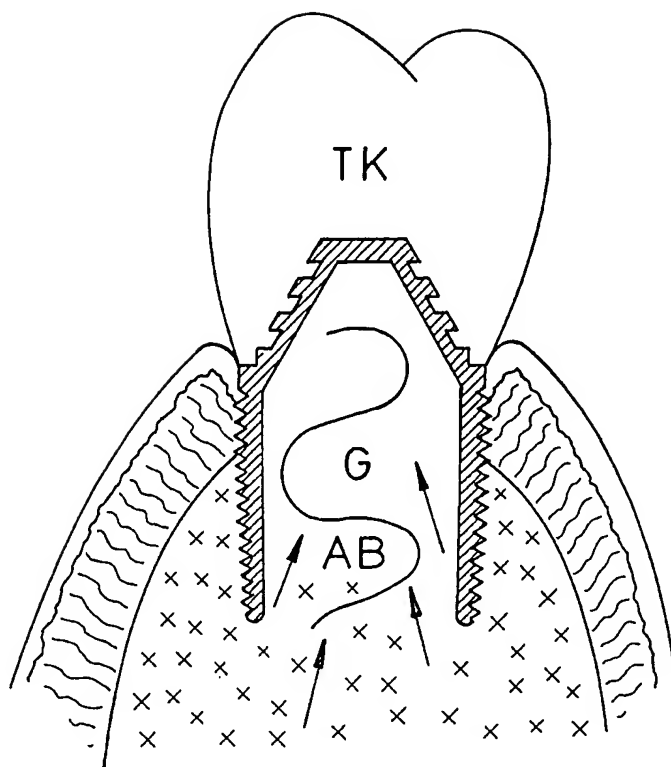


FIG. 5

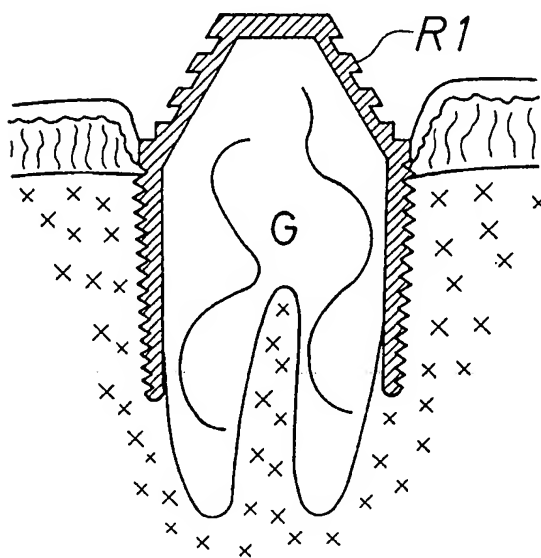


FIG. 6

BEST AVAILABLE COPY

4,10

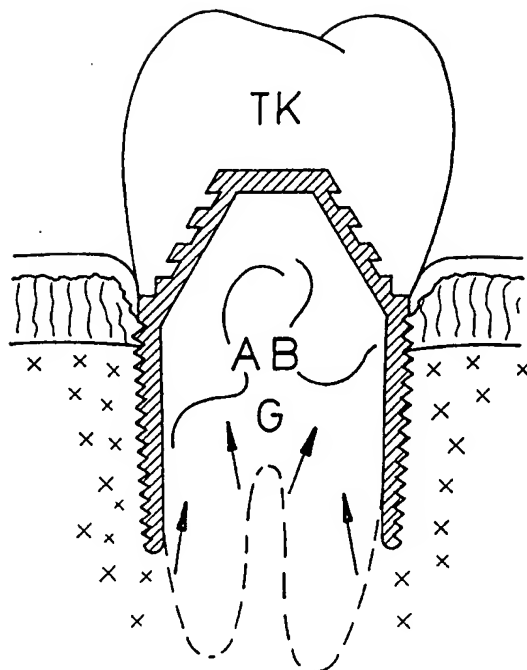


FIG. 7

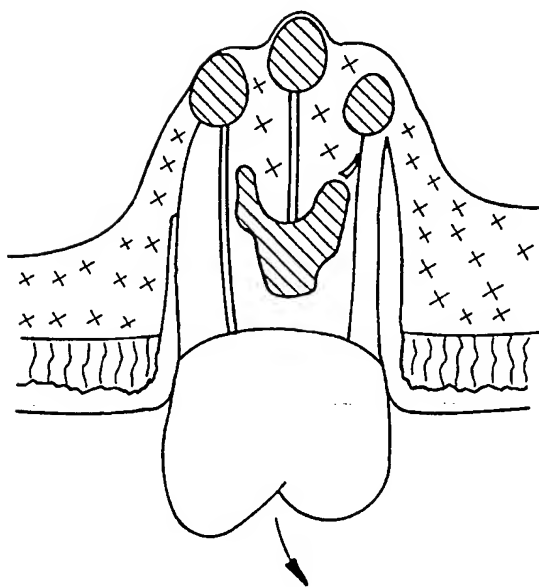


FIG. 8

10

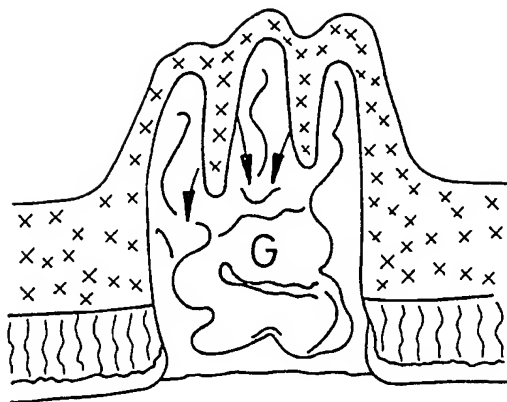


FIG. 9

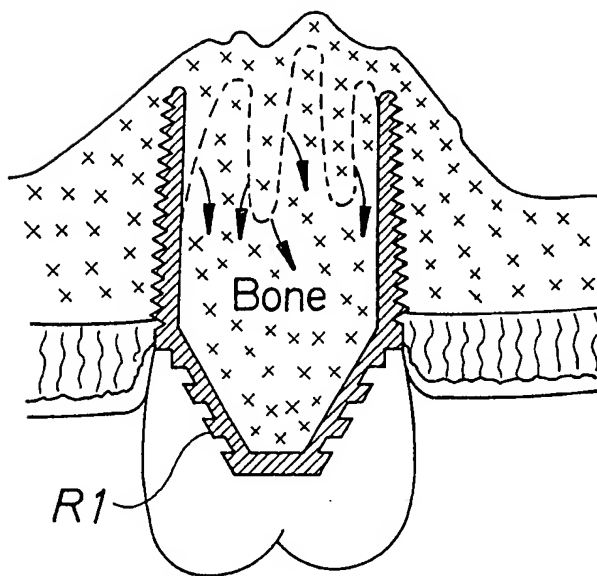


FIG. 10

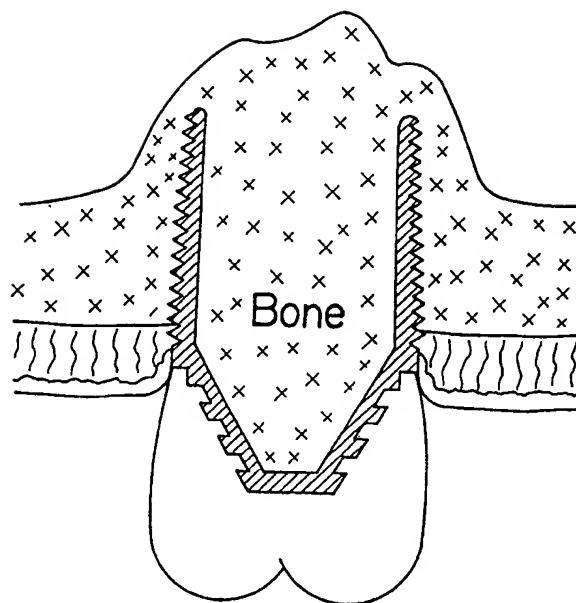


FIG. 11

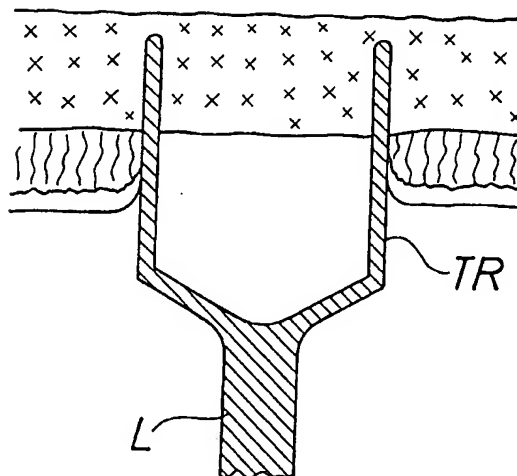


FIG. 12

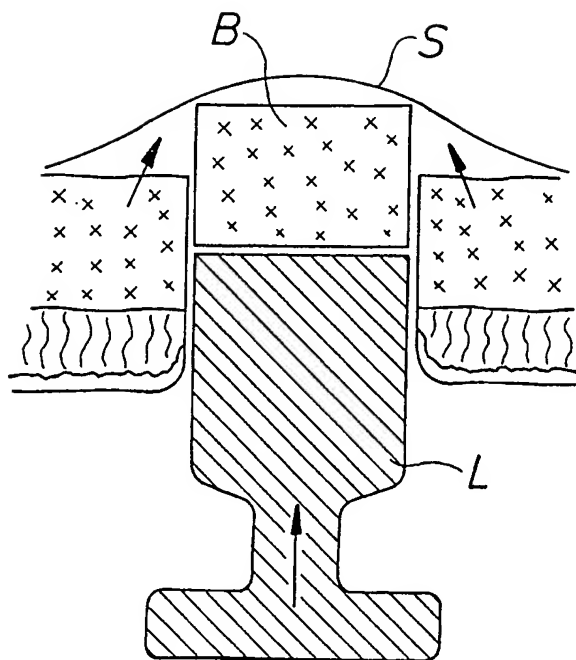


FIG. 13

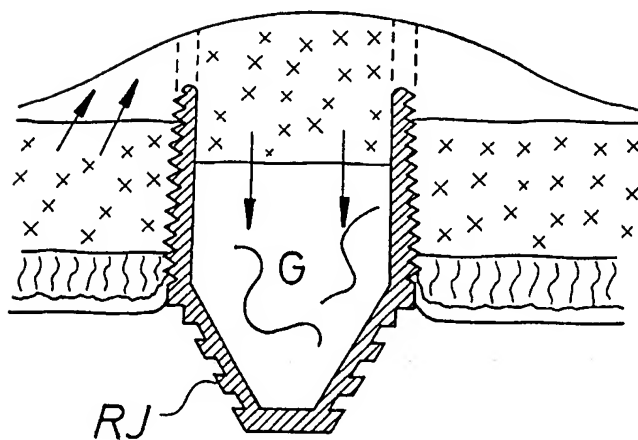


FIG. 14

BEST AVAILABLE COPY

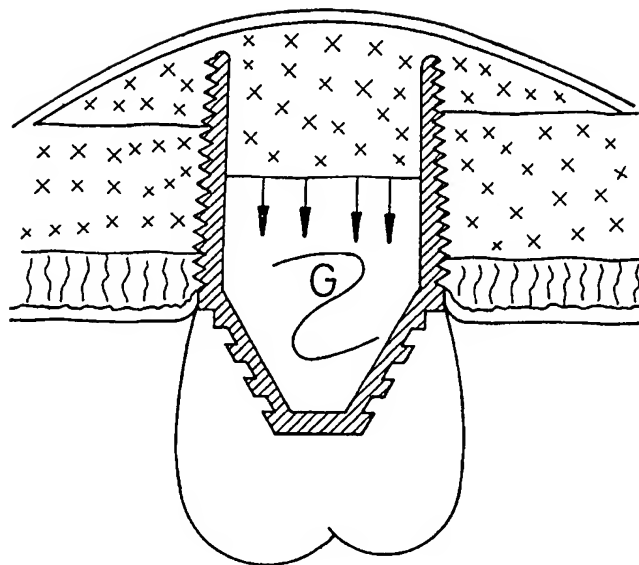


FIG. 15

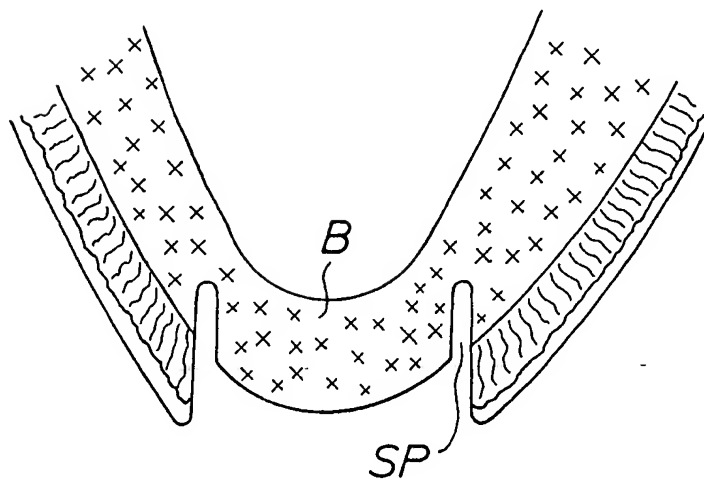


FIG. 16



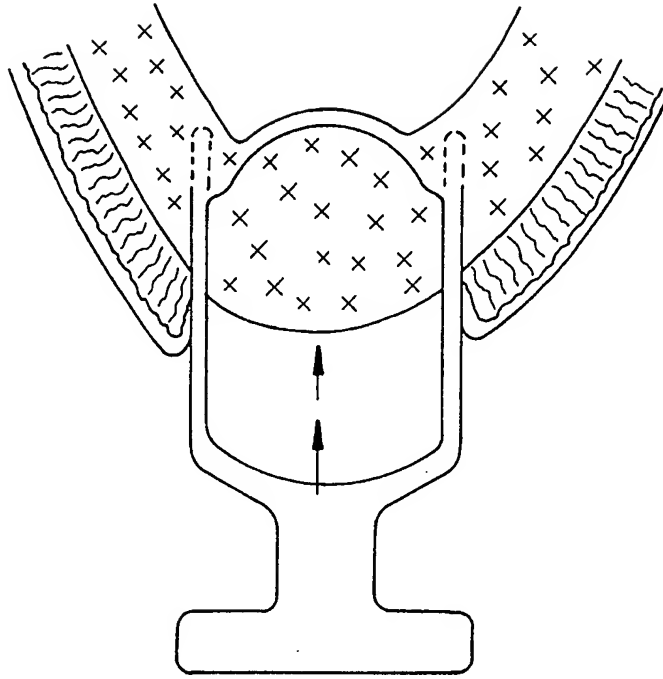


FIG. 17



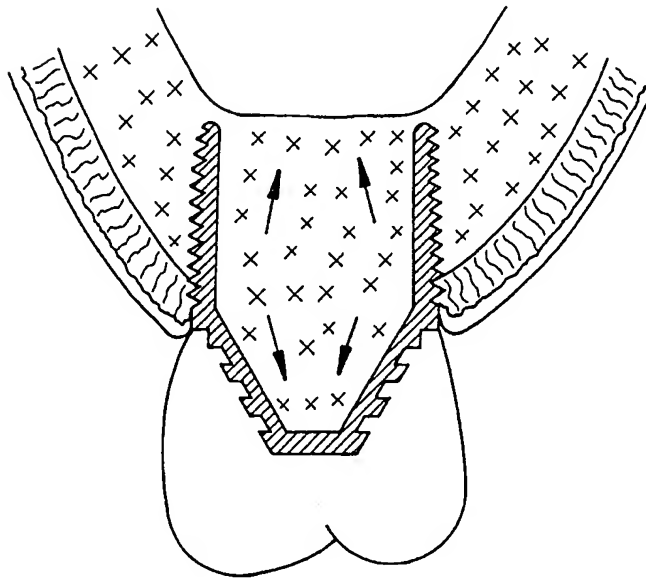


FIG. 18





*FIG. 19*

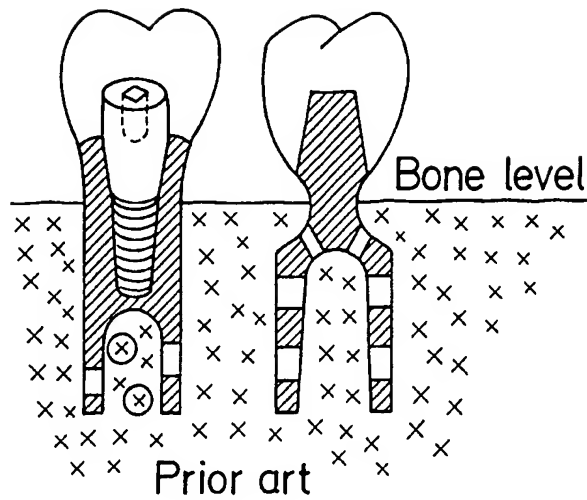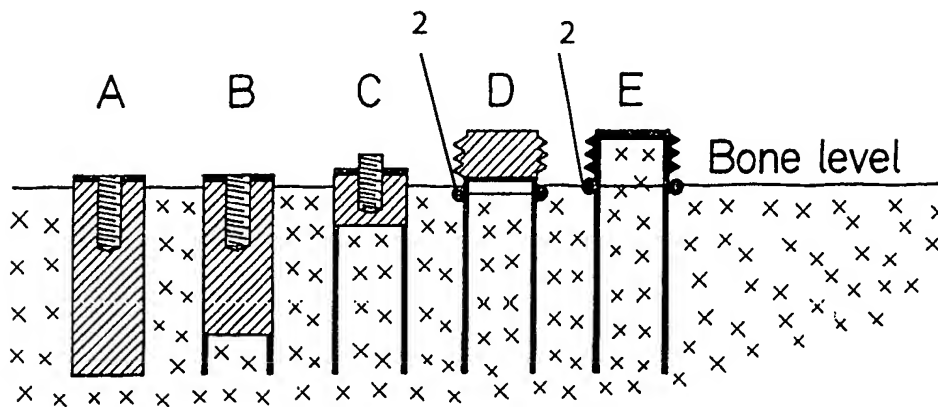

• = stop marking for D and E

A = compact cylinder  100 %

B = compact  > 50 % ; tube < 50 %

C = compact   $\approx 20$  % ; tube  $\approx 80$  %

D = tube  = 100 % according to the invention

E = tube  > 120 % according to the invention

BIK (bone-implant contact) =  $E > D > C > B > A$

*FIG. 20*